



## Semi Truck Antenna Bracket

(for micro magnetic antenna)

PART NUMBER: AN-TU




PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THE Semi Truck Antenna Bracket.

**TOOLS REQUIRED:** Two (2) 7/16" nut drivers  
**PARTS INCLUDED:** Antenna bracket assembly, hardware, rubber pad, tie wraps  
**LOCATION:** Top of mirror bracket on either door

**CAUTION:** Never kink, pinch, twist, overly stress or attempt to cut your antenna's cable. To do so may cause irreparable damage resulting in loss of signal or poor overall reception.


### STEP 1.

Hang the Antenna bracket on the top bar as in **Photo 1**. The mounting platform should extend toward the rear of the truck. **Photo 2**. Align the clamping plate holes with the holes on the Antenna bracket. Insert a bolt through the front of the bracket, through the clamping plate, washer and hand tighten a nylok nut. Repeat procedure with the other three (3) bolts. An optional, rubber pad is included and may be used to ensure a tight, non-slip fit.

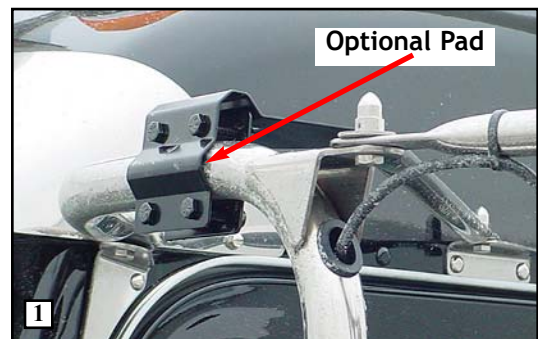

### STEP 2.

From the topside of the bracket, slide the antenna's cable through the front hole and set the body of the antenna in place between the three guide tabs. The antenna's magnet will hold it securely in place. **Photo 3**.

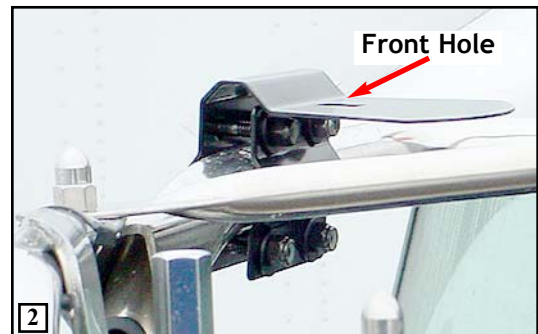

### STEP 3.

Route the antenna cable through the wing window or between the door and weather stripping. As a precaution, excess exterior antenna cable should be either secured with tie wraps or wrapped in a spiral fashion around the mirror bracket. Pull the remaining antenna cable into the cab and attach to the Satellite Radio receiver.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Bracket. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

