



AUDI A4 SEDAN (1996-99) AUDI A4 AVANT WAGON (1998-99)

PART NUMBER: AU-54-96

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 8 mm socket & driver. one (1) set of Mercedes radio removal tools (**Pro.Fit** part #DM-20-22.), **one Audi radio card for reprogramming radio for installation. (Ask customer for card).**

PARTS INCLUDED: **Pro.Fit VSM®** and instructions.

LOCATION: To the right of the radio.

STEP 1.

Begin by removing radio with Mercedes radio removal tools. Remove wiring harness and antenna from radio. Set aside.

STEP 2.

Locate and remove two (2) 8mm screws on the left and right sides of the radio trim bezel using your socket and driver. **CAREFULLY** pull on bottom of radio trim bezel to remove. Set aside. Remove the screw located directly under and to the right of the screw that has already been removed on the right side of the radio.



STEP 3.

Attach the phone holder onto the **Pro.Fit VSM®**. Place the **Pro.Fit VSM®** over the screw holes. Replace and tighten the last screw that was removed, making sure the screw hole for the second screw remains aligned.




STEP 4.

Replace radio trim bezel. Replace 8mm screws and tighten. Reconnect radio wiring harness and antenna. Re-insert radio. **IMPORTANT!!! RADIO MUST BE RE-PROGRAMMED USING THE AUDI RADIO CARD.** To do this, press the DX & FM 1/2 buttons down at the same time until 1000 appears on the screen. Use the 1, 2, 3, & 4 buttons to program the code. Press DX & FM 1/2 buttons again. Radio will automatically come on. **NOTE:** On 1999 models you will need to press the FM2 and RDS buttons at the same time instead of the DX & FM1/2 buttons.



This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

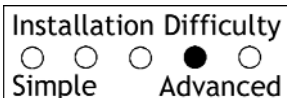

© **Pro.Fit International**, Eagan, MN 2003

<p>VIEW INSTRUCTIONS & UPDATES ONLINE @ WWW.PRO-FIT-INTL.COM</p>
