



BUICK LeSABRE (2000-2005)

PART NUMBER: **BK-50-00**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
 All instructions assume a drivers seat vantage point. * Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, 9/32" socket & driver.

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: To the right of the climate control


STEP 1. Begin by opening the glove compartment and locating the two Phillips screws along the top inside part of the glove box. Remove these screws using a #2 Phillips screwdriver and set them aside. It is not necessary to remove the glove box.

STEP 2. Remove the simulated wood trim bezel that surrounds the climate control and extends from the right of the steering wheel to the left of the passenger door. **NOTE: The metal clips that hold the trim bezel in place are very fragile. They might unhook from the trim bezel and get stuck in the clip holes. If this happens, you will need to remove the metal clip from the clip hole and apply it back onto the trim bezel before replacing the bezel.** Grasp the far right side of the trim bezel just to the right of the air vent that is integrated into the bezel. Carefully pull toward you to release the first of a series of five (5) clips. **NOTE:** Make sure the two tabs on the bezel for the two Phillips screws clear the glove box insert before removing the remaining clips. Continue working the bezel loose all the way to right of the steering wheel. Set the bezel aside.

STEP 3. Locate the clip hole that is to the right of the climate control. To the right of the hole are two 9/32" hex head screws. Remove those screws with the 9/32" socket and driver. Place the Pro.Fit VSM® over these two screw holes. Insert the factory screws and tighten.

STEP 4. Install the phone holder onto the Pro.Fit VSM®. Re-assemble the dash in reverse order securing all screws and clips.

This completes the installation of your Pro.Fit VSM®.

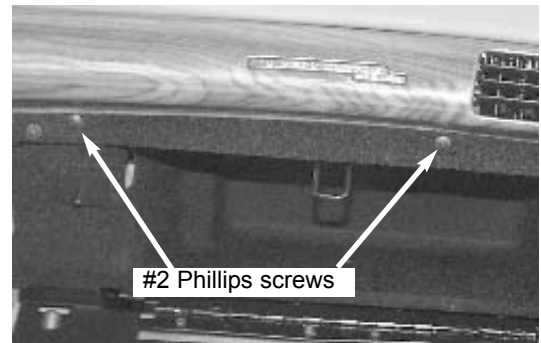

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

