



INSTALLATION INSTRUCTIONS

BUICK RIVIERA (1995-99)
Center Console Shift Only

PART NUMBER: BK-51-95

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: 5/64" drill bit, drill, Phillips screwdriver, hook tool, utility knife, small standard screwdriver.

PARTS INCLUDED: Pro.Fit VSM™, two (2) 8x1/2" screws, instructions.

LOCATION: Right of the ashtray.

STEP 1.

Begin by removing trim bezel surrounding ashtray and CD player/cubby hole. The trim bezel is held in place by four (4) clips: two (2) parallel to ash tray and two (2) parallel to CD player or cubby hole. Open ashtray door, exposing the ash tray. Insert hook tool between trim bezel and dash on sides, pulling on hook tool to release clips. Continue, releasing all four clips. Disconnect the cigarette lighter wiring harness. Remove trim bezel and set aside.

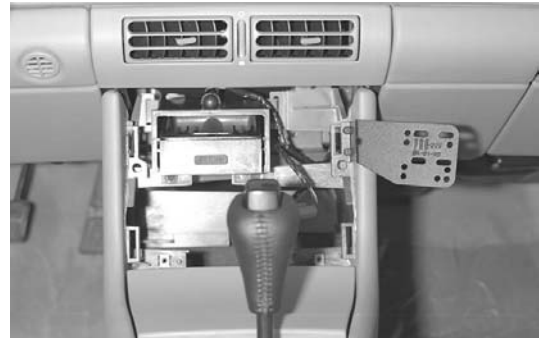

STEP 2.

Place the **Pro.Fit VSM™** to the right of rectangular slot (located on right side of cavity) to the right of cigarette lighter. Some vehicles will have an excess of vinyl dash covering material in the adjacent corner to the tab that is attached with staples. Some vehicles do not use staples in attaching this vinyl dash covering. If so, remove excess materials and staples (if used) so that mount will fit tightly into corner before marking or drilling pilot holes. Remove as little material as possible to assure a snug fit. Hold the **Pro.Fit VSM™** in corner flush with top of tab. Mark holes as close to corner as possible and drill pilot holes for screws.



STEP 3.

Install the hang up cup onto the **Pro.Fit VSM™**. Place the **Pro.Fit VSM™** into position. Insert and tighten provided screws.



STEP 4.

Reinstall cigarette lighter wiring harness. Reinstall trim bezel.

This completes the installation of your **Pro.Fit VSM™**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876
Web Address: www.pro-fit-intl.com