



BMW

318is (1996-97), 318iC (1997)

318i Sedan 328i, 328is (1996-98), 328iC (1997-98)

M3 Sedan & Convertible (1996-2000), 323is (1999-2001)

PART NUMBER: **BM-50-96**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®. All instructions assume a drivers seat vantage point. * Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Small stub Phillips screwdriver, 7mm socket, ratchet, and extension, protective cloth.


PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: To the right of the computer control module.

STEP 1. Apply emergency brake. Shift transmission into low gear. Locate hole inside cubby hole below the climate control computer. Insert finger into hole and apply upward and outward pressure to release computer control module. **Do not disconnect wiring.** Let the climate control hang to the left side of center console. **Use protective cloth between dash and climate control.** Remove cubby hole compartment module by grasping with your hands and pulling outward. Cubby module will pivot from bottom section. **Do not disconnect wiring.** Let module rest on the left side of center console. **Use protective cloth.**



STEP 2. Inside open cavity, locate the steel vertical bar which holds the right side of the console trim panel in place. Remove one (1) Phillips head screw located on the middle of this bar. Set screw aside. On top of bar, locate and remove one (1) 7mm screw using ratchet, socket, and extension. Set aside. Locate one (1) Phillips screw behind bar. Using Phillips screwdriver, remove and set aside. In upper right hand corner of cavity, locate and remove one (1) Phillips screw and set aside. Right side of console trim panel will be loose.

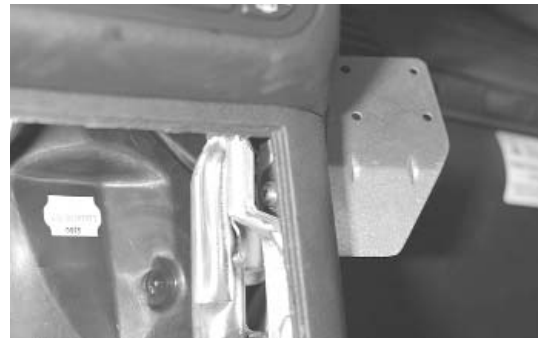


STEP 3. Slide Pro.Fit VSM® behind right side of trim panel between panel and vertical bar aligning Pro.Fit VSM® with screw hole which holds trim panel in place. Insert the Phillips screw and tighten.



STEP 4. Replace all other screws and reassemble dash in reverse order. Shift transmission back into the park position. Install hang up cup onto Pro.Fit VSM®.

This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

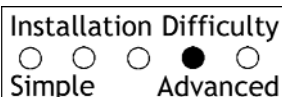

© Pro.Fit International, Eagan, MN 2004

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**