



INSTALLATION INSTRUCTIONS

BMW Z3 (1996-2002)

PART NUMBER: BM-52-96

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: # 2 Phillips screwdriver, 5/64" drill bit, drill, marking pen, flat head screwdriver.

PARTS INCLUDED: Pro.Fit VSM™, instructions, two (2) #10x5/8" screws.

LOCATION: To the right of the center console air duct module.

STEP 1. Begin by removing the air duct module that is above the radio.
Caution: clips are very fragile. To do this, **carefully** insert the flat head screwdriver between the air duct module and the radio trim bezel on the right side. Carefully pry upward to release a small plastic clip. Perform this same action on the left side. Once the two (2) bottom clips are loose, grasp the air duct module and pull it out of its cavity releasing the two (2) top clips. Set the bezel aside.


STEP 2. Inside of the air duct module cavity on the right side, locate a flat spot where the Pro.Fit VSM™ will go. Install the phone holder and phone onto the Pro.Fit VSM™. Place the Pro.Fit VSM™ over this flat spot. Adjust the angle of the phone, then use your marking pen and the holes in the Pro.Fit VSM™ as a guide to mark two spots for drilling pilot holes. Set the Pro.Fit VSM™ aside.

STEP 3. Using your 5/64" drill bit and drill, **carefully** drill two pilot holes. Place the Pro.Fit VSM™ over the pilot holes. Insert the two (2) provided screws and tighten with your #2 Phillips screwdriver.

STEP 4.

Replace the air duct module securing all four plastic clips.

This completes the installation of your Pro.Fit VSM™.

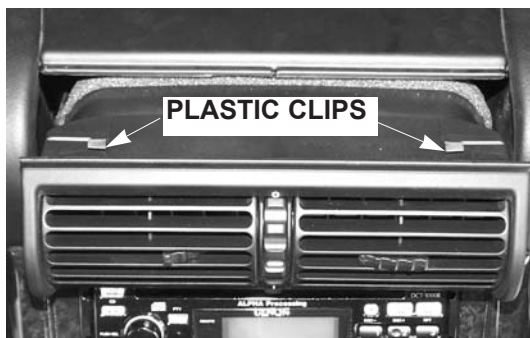

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: www.pro-fit-intl.com