



**BMW 740i, (1995-2001)**  
**BMW 740iL, 740iA (1998-2003)**

**PART NUMBER: BM-52-99**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**  
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** #2 short Phillips screwdriver, 3/16" drill bit and drill, marking pen, protective cloth.

**PARTS INCLUDED:** Pro.Fit VSM®, instructions, two #10x5/8" screws.

**LOCATION:** To the right of the center console just above the glove box door.

**STEP 1.** Locate and remove a narrow trim piece just above the glove box door. To do this open up the glove box door and locate three Phillips screws along the top front section of the glove box. Remove these screws using the short #2 Phillips screwdriver. Set the screws aside. Carefully grasp and pull down on the top inside section of the glove box, but don't remove. The top section also has the courtesy light integrated into it. Insert your hand above the top section of the glove box. By feeling along the backside of the trim piece, locate five plastic long handled nuts. Unscrew these nuts by hand. Set the nuts aside. Grasp the narrow trim piece and carefully pull it toward you to remove. Set the trim piece aside.

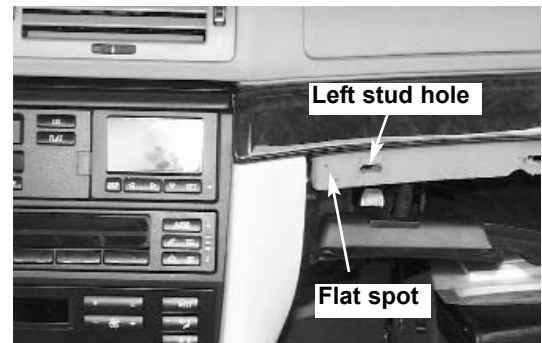

**STEP 2.** Locate a flat spot to the left of the left stud hole that holds the narrow trim piece in place. Place the Pro.Fit VSM® over this flat spot. Using the holes in the Pro.Fit VSM® as a guide mark two spots for drilling. Set the mount aside. **Caution: When drilling the pilot holes through the padding and metal backing, you will generate a small amount of metal shavings. Make sure to lay a protective cloth down underneath the area you will be drilling so you can catch most of the metal shavings. It is also a good idea to have a small vacuum handy to clean up any remaining shavings.** Carefully drill two pilot holes using the 3/16" drill bit and drill.




**STEP 3.** Install the phone holder onto the Pro.Fit VSM®. Place the Pro.Fit VSM® over the pilot holes aligning all the holes. Insert the provided screws and tighten with the #2 Phillips screwdriver.



**STEP 4.** Re-assemble the dash in reverse order securing all the screws and nuts.

This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eaganale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

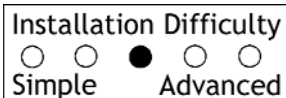

© Pro.Fit International, Eagan, MN 2004

**VIEW INSTRUCTIONS & UPDATES**  
**ONLINE @**  
**WWW.PRO-FIT-INTL.COM**