



BMW X5 (2001-2006)

PART NUMBER: **BM-70-01**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tools, 5/64" drill bit and drill, # 2 Phillips screwdriver, marking pen.


PARTS INCLUDED: Pro.Fit VSM®, two (2) # 8 x 3/4" screws, instructions.

LOCATION: Right of Radio

STEP 1. Begin by removing the trim bezel located directly below the passenger side airbag. (See photo # 1). Insert a hook tool under the left side of the bezel and gently pull upward to release the left retainer clip. Continue working the hook tool from the left to the right end of the bezel, pulling upward and releasing the final two (2) clips. Set the bezel aside.




STEP 2. Place the **Pro.Fit VSM®** on the dash pad directly below the left retainer clip. Slide the **VSM®** downward until it is snug against the bottom of the bezel cavity. (See photo # 2). Using the **VSM®** as a guide, mark the location of the two (2) mounting holes. Set the **VSM®** aside. Using a 5/64" drill bit and drill, drill two (2) pilot holes at the marked locations. Position the **VSM®** over the pilot holes, insert two (2) # 8 x 3/4" screws and tighten. Reassemble the dash in reverse order.

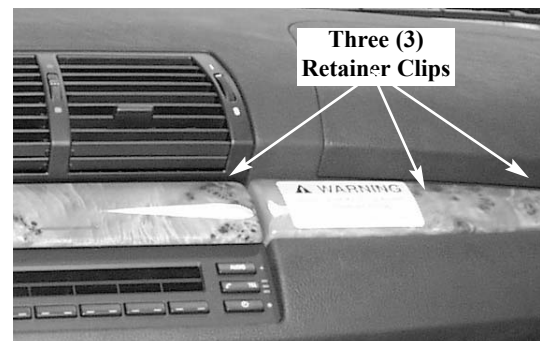

This completes the installation of your **Pro.Fit VSM®**.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2005

