



**CADILLAC DeVILLE DTS (2000-2005)**  
**CADILLAC DeVILLE DHS (2000-2005)**  
 (w/o Navigation)

**PART NUMBER: CD-51-00**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**  
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**


**TOOLS REQUIRED:** Phillips screwdriver, 5/64" drill bit and drill, marking pen, hook tool

**PARTS INCLUDED:** Pro.Fit VSM®, instructions, two (2) #8x3/8" beveled-head screw

**LOCATION:** To the right of the radio.


**Step 1.**

Begin by removing the bezel that surrounds the radio. Insert a hook tool into the lower right corner of the bezel. Gently pull toward you to release the bezel clip. Slide the hook tool toward the lower center and release the center clip. Release the lower left corner in the same manner. Next, insert the hook tool in the upper right corner and gently pull out. Release the upper left corner in the same manner. Set the bezel aside.

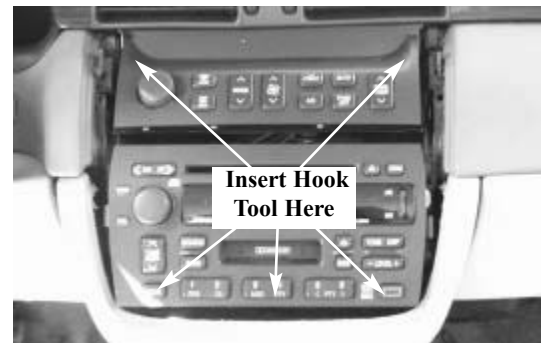

**Step 2.**

Insert a thin, flat screwdriver into the release clips that are located on both sides of the radio. Push the clip inward to release. Pull the radio out slightly, **without** disconnecting the wiring harness. Align the Pro.Fit VSM® against the dash, to the right of the radio cavity, directly below the flat spot. Using the Pro.Fit VSM® as a template, mark the two (2) screw holes. Using a 5/64" drill bit and drill, carefully drill two (2) pilot holes. Center the Pro.Fit VSM® over the pilot hole, insert the two(2) #8x3/8" screws and tighten.

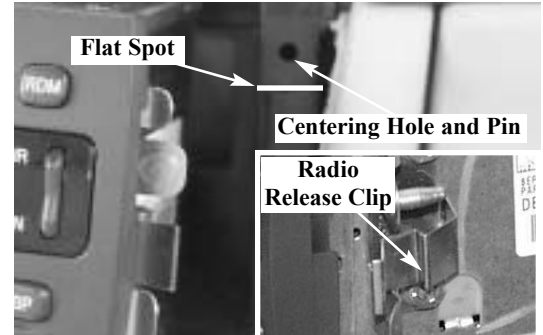


**Step 3.**

Reassemble the dash in reverse order. **Note:** The radio has a centering pin that must be aligned with the centering hole in order to lock in place properly.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

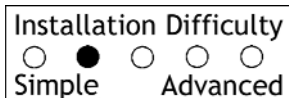

© Pro.Fit International, Eagan, MN 2005

