



INSTALLATION INSTRUCTIONS

CADILLAC DEVILLE (1987-93)

PART NUMBER: **CD-51-87**

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 9/32" socket, 1/4" & 5mm socket, standard screwdriver.

PARTS INCLUDED: **Pro.Fit VSM™**, instructions, two (2) #6X3/8" hex head screws.

LOCATION: To the right side of radio/cassette or radio/CD player.

STEP 1.

Begin by removing the trim panel which surrounds the radio. Grasp the trim panel and **gently** pull out, starting from top right corner of radio or pull from recessed top center notch. Panel will release for removal, revealing two (2) screws at top of radio. Set panel aside.

STEP 2.

Using the 9/32" socket and driver remove three (3) screws holding the radio, two (2) in the front at the top of radio and one (1) from underneath. Pull the ash tray out to access the bottom screw (the left most and closest to the seat). Set screws aside. Pull the radio out its cavity. Remove the two (2) screws at the right side of radio housing. **NOTE:** There are two (2) sets of matching screws. Match the set provided in the **Pro.Fit VSM™** to those from the radio housing: Radio/cassette has self-tapping screws, Radio/CD has machined screws.


STEP 3.

Mount the phone holder onto the **Pro.Fit VSM™**. Align the two (2) holes on the **Pro.Fit VSM™** with the two (2) holes on the right side of radio and replace with the screw set provided with **Pro.Fit VSM™**.

STEP 4.

Slide radio back into position and replace three (3) screws. Re-attach the trim panel around radio.

This completes the installation of your **Pro.Fit VSM™**.

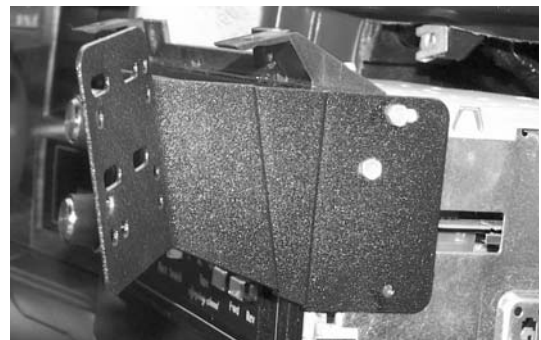

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: www.pro-fit-intl.com