



## CADILLAC CTS (2003-2006) CADILLAC SRX (2004-2006)

PART NUMBER: **CD-56-03**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** #2 Phillips screwdriver, hook tool, 5/64" drill bit and drill, 7mm screw driver, small file.

**PARTS INCLUDED:** Pro.Fit VSM®, two (2) # 8 x 1/2" screws, instructions.

**LOCATION:** Right of climate control.


### STEP 1.

Set the parking brake and put the gear shift into neutral. Open the ashtray door by pushing the top of the panel. See photo # 1. Remove the ashtray and locate the 7mm screw at the back of the ashtray cavity. Remove the 7mm screw. Insert a hook tool or dash trim removal tool (**DM-40-22**) behind the upper left corner of the climate control bezel. Pull or pry out gently to release a retainer clip. Work the hook tool around the bezel until all the clips are released. Let the bezel hang down. It is not necessary to disconnect any wiring.



### STEP 2.

Place the VSM® against the dash pad as in Photo # 2. Mark the top and bottom of the VSM® and set it aside. **Carefully** file the small ridge, located between your marks, flush to the dash pad. See Photo # 3. The VSM® will sit firmly against the dash pad when finished.

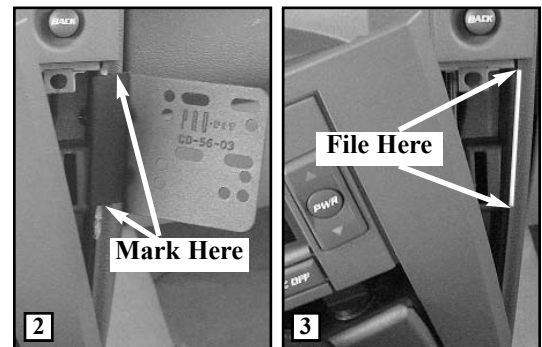

### STEP 3.

Once again, place the VSM® against the dash pad as in Photo # 2. Using the VSM® as a guide, mark the location of the two (2) pilot holes. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. These holes should be about 1/2" deep. Align the VSM® over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order. Place the gear shift into park and release the parking brake.



This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

