



## CHEVROLET MONTE CARLO (2000-2005)

PART NUMBER: CV-55-00

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** Hook tools, 7mm socket and driver, masking tape, 5/64" bit and drill, marking pen, #2 Phillips screwdriver.

**PARTS INCLUDED:** Pro.Fit VSM®, instructions, one (1) #8 x 3/8" screw.

**LOCATION:** Right of radio

**STEP 1.** Begin by opening the driver's side door and locating the fuse panel on the side of the dash. Pull the panel cover off and remove the 7mm screw located in the fuse panel. (See photo # 1). On the driver's side, there is a black panel below the hood release handle. Pushing the two (2) thumb clips in will release the panel and cause it to hang down. With the panel hanging down, locate and remove two (2) 7mm screws. (See photo # 2). Next, remove the trim piece below the steering column by gently pulling it towards you with a hook tool. This piece is held in place with two (2) clips; one (1) each in the upper right and left hand corner of the panel. Let this panel hang down.


**STEP 2.** Open the glove compartment and remove the 7mm screw located in the upper left corner. Leave the door open. Next, remove the trim bezel around the radio / instrument cluster by inserting a hook below the lower left hand corner of the climate control and gently pulling outward. Work your way around the bezel with a hook tool, releasing all clips until bezel is completely loose. Disconnect the wiring clip to the hazard switch to make the rest of the installation easier.

**STEP 3.** Remove the 7mm bolt to the right of the radio. Align the lower mounting hole of the Pro.Fit VSM® over the bolt hole. Mark the location of the upper hole with a marking pen. Using a 5/64" drill bit and drill, drill a pilot hole approximately 1/2" deep. Align the Pro.Fit VSM® over the bolt and pilot holes, insert the factory bolt and tighten. Insert a #8 x 3/8" screw in the top hole and tighten. **Place masking tape on the dash bezel as pictured in Photo # 1 before proceeding with the next step.** Turn the instrument panel approximately 90° clockwise, place it over the VSM® rotate it back into position.

**STEP 4.** Reassemble the dash in reverse order, remembering to reconnect the wiring clip to the hazard switch. Remove the masking tape from the trim bezel.

This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

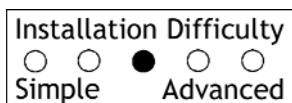

© Pro.Fit International, Eagan, MN 2005

**VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
WWW.PRO-FIT-INTL.COM**

