



CHEVROLET TRACKER (1999-2004) SUZUKI GRAND VITARA (1999-2000)

PART NUMBER: CV-70-99

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #1Phillips screwdriver, side cutting pliers, small coarse file, marking pen, masking tape.

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: To the right of the radio


STEP 1. Open and remove the ashtray. Behind the ashtray locate and remove two (2) Phillips screws using the #1 Phillips screwdriver. Set the screws aside. Just above the radio locate and remove one more Phillips screw and set the screw aside. Grasp the top of the bezel and pull toward you to release two (2) side clips. Set the bezel aside.

STEP 2. Locate and remove two (2) screws to the right of the radio. Carefully pull the right side of the radio out just enough to slide the Pro.Fit VSM® behind the radio mounting bracket. The bottom hole in the Pro.Fit VSM® will align with the bottom hole of the radio mounting bracket. And the top hole in the Pro.Fit VSM® will align with the centering pin. Re-install the two factory screws and tighten.


STEP 3. Carefully place the bezel back into position **without** securing the two side clips. On the right side of the bezel use the marking pen to place marks above and below the Pro.Fit VSM® on the inside rib of the bezel. This is where you will notch out a section of bezel so the bezel will secure properly.

STEP 4. Pull the bezel back away from the dash. Place masking tape above and below the two marks and any other area where the file may come in contact with the bezel. Using a combination of a side cutters and a small file, carefully remove 5/32" from the inside rib of the bezel. Remove the masking tape. Re-install the bezel securing all clips and screws. Insert the ashtray back into position. Install the phone holder onto the Pro.Fit VSM®.

This completes the installation of your Pro.Fit VSM®.

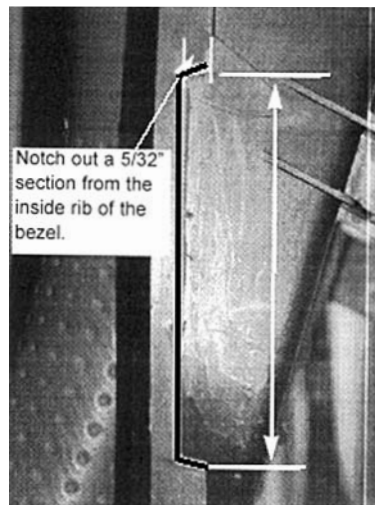

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

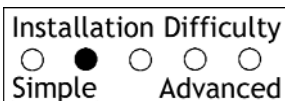

© Pro.Fit International, Eagan, MN 2004

