



**PONTIAC MONTANA (1999)
PONTIAC TRANS SPORT (1997-98)
OLDSMOBILE SILHOUETTE (1997-99)
CHEVROLET VENTURE(1997-99)**

PART NUMBER: CV-93-97

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®. All instructions assume a drivers seat vantage point. * Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #1 Phillips screwdriver.

PARTS INCLUDED: **Pro.Fit VSM®**, instructions.

LOCATION: To the right of the radio.

STEP 1.

Begin by removing radio trim bezel. To do this, open ashtray and auxiliary power outlet door. Using your #1 Phillips screwdriver, remove the one (1) screw to the right of the ashtray and one (1) to the left of the power point door. Grasp the bezel and pull toward you to release clips. **Do not disconnect wiring.** Let the bezel hang out of the way.



STEP 2

Remove the screw to the right of the radio. Install hang-up cup onto **Pro.Fit VSM®**. Place **Pro.Fit VSM®** over centering pin and screw hole. Insert factory screw and tighten with your #1 Phillips screwdriver.




STEP 3.

Replace the bezel, insert and tighten all screws, and close the ashtray and power point door.



This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

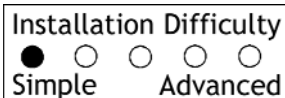

© **Pro.Fit International**, Eagan, MN 2003

