



Dodge Stratus Sedan (2001-2006) Chrysler Sebring Convertible & Sedan (2001-2005)

PART NUMBER: **DG-54-01**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, hook tool, 5/64" drill bit and drill, marking pen.


PARTS INCLUDED: Pro.Fit VSM®, instructions, three (3) # 8 x 1/2" screws.

LOCATION: Right of radio

STEP 1. Begin by removing the trim bezel around the radio and climate control module. The bezel is held in place with six (6) clips, one (1) each in the following locations: lower left and right, middle left and right, and upper left and right. Insert a hook tool in the lower right corner and gently pull outward to release a clip. Work the hook tool up the right side and then the left, gently pulling outward until all the clips are released. Pull the bezel forward and slide it slightly to the left, exposing a trim screw. (See photo #2). The climate control is integrated in the bezel, so it will also come forward. Do not disconnect any wiring.



STEP 2. Remove the Phillips screw shown in photo # 2. Next, remove the trim bezel strip located directly right of the trim screw. Insert a hook tool behind the left end of the trim bezel strip and pull outward. Working to the right with a hook tool, release the four (4) trim bezel clips. (See photo # 2). Set the trim piece aside.

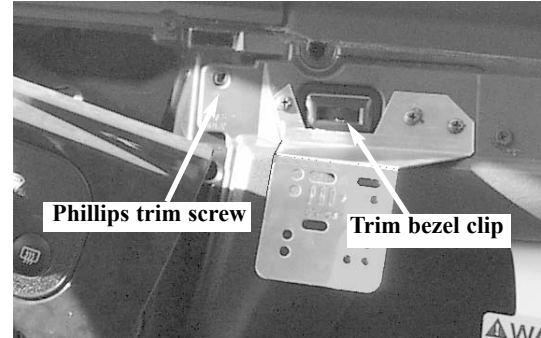


STEP 3. Place the Pro.Fit VSM® under the trim bezel clip as shown in photo # 2. Hold it snugly against the dash pad and mark the location of the three (3) screw holes. Set the Pro.Fit VSM® aside. Drill three (3) pilot holes at the marked locations using a 5/64" drill bit and drill. These holes should be about 1/2" deep. Align the Pro.Fit VSM® over the pilot holes, insert three (3) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2006

