



DODGE RAM 1500 (2002-2004)
DODGE RAM 2500, 3500 (2003-2004)
PART NUMBER: DG-70-02

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 7mm nut driver, #2 Phillips screwdriver, 5/64" drill bit and drill, marking pen.


PARTS INCLUDED: Pro.Fit VSM®, three (3) - 8x1/2" screws, instructions.

LOCATION: Right of Radio.

STEP 1. Begin by removing the trim bezel around the radio and climate control module. Remove the 7mm hex head screw located below the right-of-radio air vent. (See photos # 1 & 2). Open the glove compartment, grasp the lower right corner of the bezel and pull out gently, releasing a retainer clip. Continue pulling outward as you work your hands around the bezel, releasing all eight (8) clips. (See photo # 2). Disconnect the wiring harnesses to the bezel and set bezel aside.

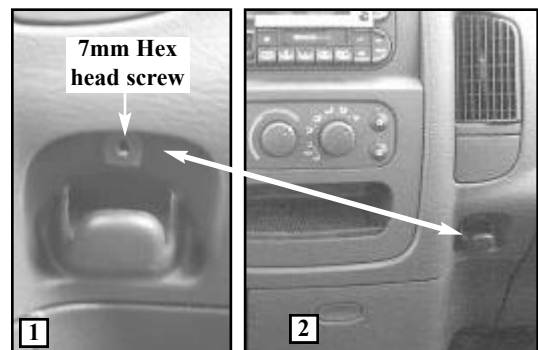

STEP 2. Remove four (4) 7mm hex head screws from the four (4) corners of the radio. Slide the radio out of its cavity and let it hang down. It is **not necessary** to disconnect the wiring to the radio.

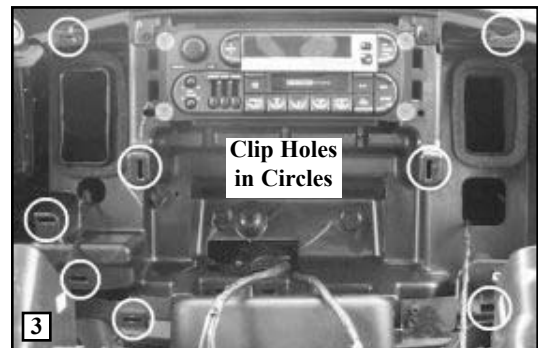

STEP 3. Place the Pro.Fit VSM® against the dash pad in the upper right corner of the radio cavity. The VSM® needs to be slid to the far right edge of the cavity. Using the VSM® as a guide, mark the location of the three (3) mounting holes. Set the VSM® aside. Using a 5/64" drill bit and drill, drill three (3) pilot holes, approximately 3/8" deep at the marked locations. Position the VSM® over the pilot holes, insert three (3) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

