



Dodge Dakota (2005-2007)

PART NUMBER: DG-71-05-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**TOOLS REQUIRED:** #2 Phillips screwdriver, Dash Trim Removal Tool (DM-40-22), 7mm nut driver, 5/64" drill bit and drill

**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) #8 x 1/2" screws

**LOCATION:** Right of radio

### STEP 1.

Locate and remove two (2) 7mm screws at the bottom of the radio bezel, below the air bag switch. **Photo 1.** Insert the dash trim removal tool behind the lower-right corner of the radio bezel. Pry bezel outward to release a retainer clip. Work the trim tool counter-clockwise around the bezel until all clips are released. Disconnect wiring from bezel and set bezel aside.



### STEP 2.


Align the top of the Pro.Fit Legend with the top of the radio. **Photo 2.** Using the Legend as a guide, mark the location of two (2) screw holes. Set Legend aside. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.



**STEP 3.** Re-assemble the dash in reverse order. This completes the installation of your Legend.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

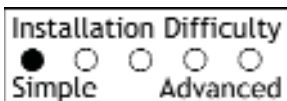



**Chevrolet Avalanche (2007-2009)**  
**Chevrolet Silverado LTZ 1500,2500,3500 (2007-2009)**  
**Chevrolet Suburban & Tahoe (2007-2009)**  
**GMC Yukon (2007-2011)**  
**GMC Sierra SLT 1500, 2500, 3500 (2007-2009)**



## PART NUMBER: DG-71-05-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**TOOLS REQUIRED:** #2 Phillips screwdriver, Dash Trim Removal Tool (DM-40-22), 5/64" drill bit and drill

**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) #8 x 1/2" screws

**LOCATION:** Right of radio or Left of radio

### STEP 1.

Insert dash trim tool behind upper right corner of radio trim bezel. **Photo 1.** Pry gently to release retainer clip. Work tool clockwise around bezel releasing four (4) clips on right side and four (4) on left. Lift bezel off and set aside.



### STEP 2.

Align the Pro.Fit Legend between the center retainer clips on either the left or right side of the radio. **Photo 2 or Photo 3.** Using the Legend as a guide, mark the location of two (2) screw holes. Set Legend aside. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.



**STEP 3.** Re-assemble the dash in reverse order. This completes the installation of your Legend.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

**Installation Difficulty**  
 ● ○ ○ ○ ○  
 Simple Advanced