



**CHRYSLER TOWN & COUNTRY  
DODGE CARAVAN , PLYMOUTH VOYAGER  
(1996-2000)**

PART NUMBER: **DG-91-96**

---

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.**  
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

---

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** #2 Phillips screwdriver, small flat screwdriver, 3/8" socket & driver, protective towel.

**PARTS INCLUDED:** Pro.Fit VSM® and instructions.

**LOCATION:** To the right side of the radio.

---

**STEP 1.**

Begin by removing small trim panel above the cup holder. To do this, use the small flat screwdriver to pry out edge and pull to release two (2) clips. Remove two (2) Phillips screws located behind this trim panel. Remove two (2) Phillips screws located above radio. **CAUTION: Use a protective towel to cover the dash when letting the trim bezel hang in order to protect it from being scratched.** Grasp the trim bezel and pull it toward you to release one clip just below the radio. Let the bezel hang to the left side.



**STEP 2.**

Using the 3/8" socket and driver, remove the two (2) bolts that hold the radio in place. Pull the radio out far enough to get the **Pro.Fit VSM®** behind the radio mounting bracket on the right side. Align the **Pro.Fit VSM®** with the centering pin and bolt hole that are located on the right side of the radio. Position radio so that the **Pro.Fit VSM®** is behind the radio mounting bracket. Insert the factory bolts and tighten.




**STEP 3.**

Replace the trim bezel. Re-install four (4) screws securing trim bezel. Install the phone holder the onto the **Pro.Fit VSM®**. Replace the small trim panel above the cup holder.



This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

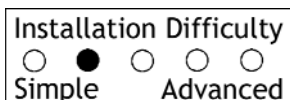

© Pro.Fit International, Eagan, MN 2004

