



## EXTENSION BRACKET

PART NUMBER: **EX-13-70**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit SOLUTION.**  
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**


**TOOLS REQUIRED:** 5/16" socket and driver or a box/open end wrench, #2 Phillips screwdriver.

**PARTS INCLUDED:** **Pro.Fit** Extension bracket, instructions, four (4) 6-32 x 1/2" flat head Phillip screws, four (4) Nylok nuts.

**APPLICATION:** To re-position phone approximately 2" in a vertical or horizontal direction or to add a second electronic device.

The **EX-13-70** is used to mount multiple electronic accessories, ie: Hands-free kits with slave handsets, GPS units, PDAs, etc. It can also be used to move an electronic device approximately 2" in either a vertical or horizontal direction.


**Caution: Avoid positioning phone in front of passenger side air bags air vents, controls, etc..**

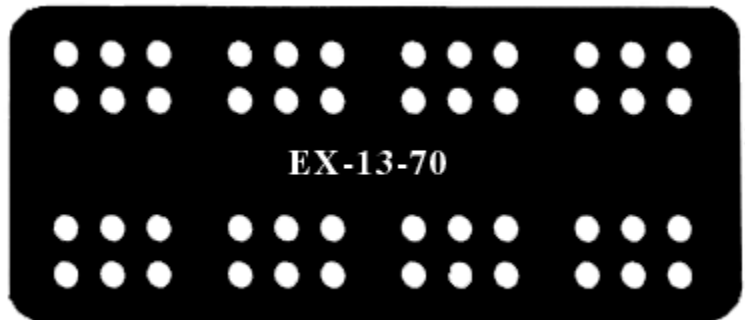

### STEP 1.


Begin by placing Extension Bracket over the face of a **Pro.Fit VSM™** (vehicle specific mount), lining up holes. Insert four (4) 6-32 x 1/2" screws through the extension bracket and **Pro.Fit VSM™**. Attach and tighten four (4) Nylok nuts.

This completes the installation of your **Pro.Fit** extension bracket.

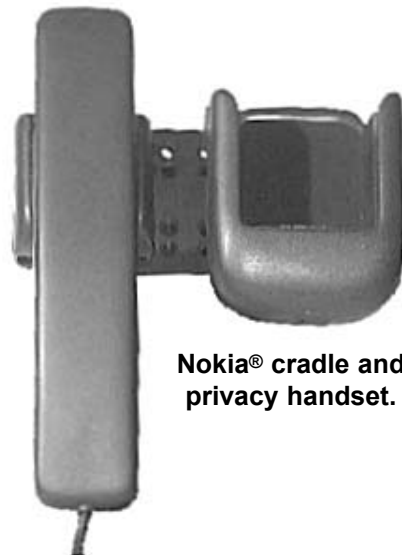

**Nokia® cradle and privacy handset.**

**Pro.Fit International, Inc.®** may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM©**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© **Pro.Fit** International, Eagan, MN 2003

