



EXTENSION BRACKET

PART NUMBER: **EX-13-70**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit SOLUTION.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 5/16" socket and driver or a box/open end wrench, #2 Phillips screwdriver.

PARTS INCLUDED: **Pro.Fit** Extension bracket, instructions, four (4) 6-32 x 1/2" flat head Phillip screws, four (4) Nylok nuts.

APPLICATION: To re-position phone approximately 2" in a vertical or horizontal direction or to add a second electronic device.

The **EX-13-70** is used to mount multiple electronic accessories, ie: Hands-free kits with slave handsets, GPS units, PDAs, etc. It can also be used to move an electronic device approximately 2" in either a vertical or horizontal direction.

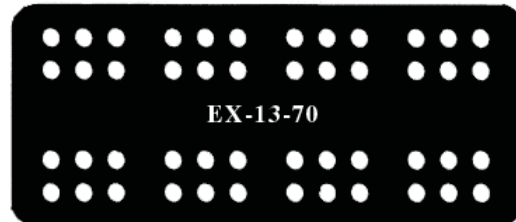

Caution: Avoid positioning phone in front of passenger side air bags air vents, controls, etc..


STEP 1.

Begin by placing Extension Bracket over the face of a **Pro.Fit VSM™** (vehicle specific mount), lining up holes. Insert four (4) 6-32 x 1/2" screws through the extension bracket and **Pro.Fit VSM™**. Attach and tighten four (4) Nylok nuts.

This completes the installation of your **Pro.Fit** extension bracket.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Product**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®**
1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© **Pro.Fit** International, Eagan, MN 2005

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM