



INFINITI Q45 (1997-2000) (See reverse side for (2001) instructions)

PART NUMBER: **IF-51-97**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tool, #2 Phillips screwdriver, marking pen, 5/64" drill bit, drill, protective towel.

PARTS INCLUDED: **Pro.Fit VSM®**, three (3) # 10 x 5/8" screws, instructions.

LOCATION: To the right of the climate control.

STEP 1. Begin by opening the arm rest. Remove cover near arm rest latch by pulling up with hook tool and releasing two (2) clips. Set the cover aside. Remove two (2) screws located under cover on right and left sides. Lift up on plastic piece and set aside. Lift up on center console bezel near shifter. This will release two (2) remaining clips. Apply parking brake. Shift transmission into low gear. Work bezel loose up toward ashtray and remove. **Do not disconnect cigarette lighter wiring harness.**

STEP 2. Below the radio locate and remove four (4) screws [two (2) on right and two (2) on left.] Remove air duct above climate control by sliding hook tool between upper left corner of air duct cover and dash pad. Hook from behind and pull towards you, working around with fingers to loosen, slide air duct out. Locate and remove four (4) screws on top, holding radio/climate control unit in place. Grasp radio/climate control unit and pull out. Place protective towel on console. Let radio /climate control unit rest on console. **Do not disconnect wiring.**

STEP 3. Position **Pro.Fit VSM®** in upper right corner of climate control cavity. Using marking pen, mark three (3) pilot holes using **VSM®** as a guide, remove mount. Drill pilot holes using 5/64" drill bit and drill. Align **VSM®** with holes. Insert and tighten screws provided.

STEP 4. Install hang-up cup onto **VSM®**. Reinstall radio/climate control unit using factory screws. Reassemble dash components. Shift transmission into park and release parking brake.

This completes the installation of your **Pro.Fit VSM®**.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Installation Difficulty

 Simple Advanced

© **Pro.Fit International**, Eagan, MN 2003

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**



INFINITI Q45 (2001)

(See reverse side for (1997-2000) instructions)

PART NUMBER: IF-51-97

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®. All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.



Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tool, #2 Phillips screwdriver, marking pen, 5/64" drill bit, drill, protective towel.


PARTS INCLUDED: Pro.Fit VSM®, three (3) # 10 x 5/8" screws, instructions.

LOCATION: To the right of the climate control.

STEP 1. Begin by opening the arm rest. Remove cover near arm rest latch by pulling up with hook tool and releasing two (2) clips. Set the cover aside. Remove two (2) screws located under cover on right and left sides. Lift up on plastic piece and set aside. Lift up on center console bezel near shifter. This will release two (2) remaining clips. Apply parking brake. Shift transmission into low gear. Work bezel loose up toward ashtray and remove. **Do not disconnect cigarette lighter wiring harness.**

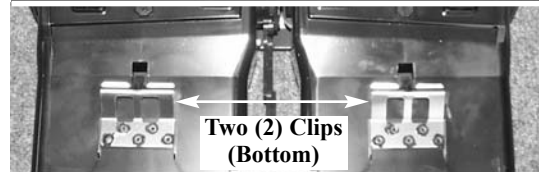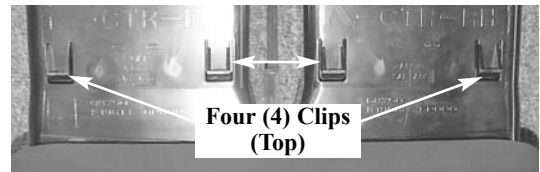

STEP 2. Locate and remove the four (4) silver colored screws from the bottom of the radio; two (2) on right and two (2) on left. Remove the air duct above the climate control by sliding a hook tool into the vent at the locations shown in **photo # 4**. Pull out slightly while pushing each clip against the vent until all the clips are released. (See photos # 1 & 2). Pull the vent out completely and set aside. Locate and remove the two (2) silver colored screws on top of the radio/climate control module. Grasp the radio/climate control module and pull out. Place protective towel on console. Let radio /climate control unit rest on console. **Do not disconnect wiring.**

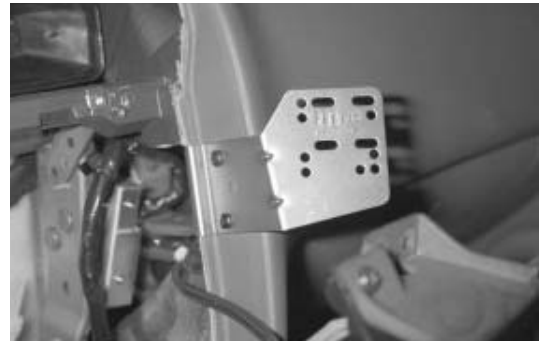

STEP 3. Position the Pro.Fit VSM® in the upper right corner of the climate control cavity. (See photo # 3). Using the VSM® as a guide, mark three (3) screw holes. Set the mount Drill 1/2" deep pilot holes using a 5/64" drill bit and drill. Align the VSM® over the pilot holes. Insert and tighten screws provided.



STEP 4. Reinstall radio/climate control unit using factory screws. Reassemble dash components. Shift transmission into park and release parking brake.

This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

