



Mercury Mountaineer 2006-2010
Ford Explorer 2006-2010
Ford Sport Trac 2008

PART NUMBER: IF-71-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, Dash Trim Removal Tool (DM-40-22), 5/64" drill bit and drill, protective cloth

PARTS INCLUDED: Pro.Fit Legend, two # 8 x 1/2" screws


LOCATION: Right of radio

STEP 1. Apply parking brake and place gear shift into drive. Open center arm rest and remove two (2) 7mm bolts from the front of the console. **Photo 1.** Insert the dash trim tool behind the gear shift trim bezel. Press down to release a retainer clip. Work the tool around the trim until all clips are released. Lift ring over gear shift and set aside.



STEP 2. Insert the trim tool behind the cup holder / shifter bezel near the 7mm bolt holes. Press down to release a clip. Work the tool around the bezel until all clips are free. Lift bezel over shifter, disconnect wiring and set bezel aside. **Photo 1.**

STEP 3. Insert trim tool behind the upper-right corner of the radio bezel. Press down gently to release a clip. Work the tool around the bezel until it is completely free. Very carefully disconnect the wiring and vacuum lines from the bezel. Set bezel aside.

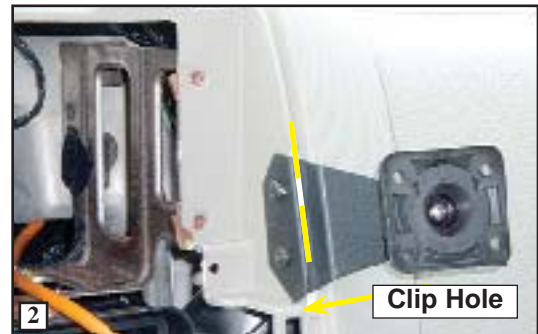


STEP 4. Remove four (4) screws from the corners of the radio. Pull radio out of its cavity, wrap protective cloth around radio and let it hang down. **Do Not disconnect radio wiring.**

STEP 5. Place the Pro.Fit Legend against the right side of the radio cavity, aligning it just above the clip hole. **(Photo 2).** Using the Legend as a guide, mark the location of two (2) screw holes and Legend top. Set Legend aside. Using a utility knife, trim the small ridge behind the Legend so it sits tight against the dash pad. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.



STEP 6. Re-assemble the dash in reverse order, remembering to reconnect the wiring harness. This completes the installation of your Pro.Fit Legend.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2005

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM