



INSTALLATION INSTRUCTIONS

JAGUAR S-TYPE (2000-2002)

PART NUMBER: JG-52-00

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: Small flat head screwdriver, 8mm socket driver.

PARTS INCLUDED: Pro.Fit VSM™, instructions.

LOCATION: To the right of the dash slide out storage compartment.

STEP 1.

Begin by locating a small trim piece that is to the right of the storage compartment on the face the dash. Carefully insert a small flat head screwdriver between the trim piece and the dash pad on the left side of the trim piece toward the bottom. Carefully pry the trim piece outward to release one spring clip. Perform this same action on the top section of the trim piece releasing one more spring clip. Set the trim piece aside.

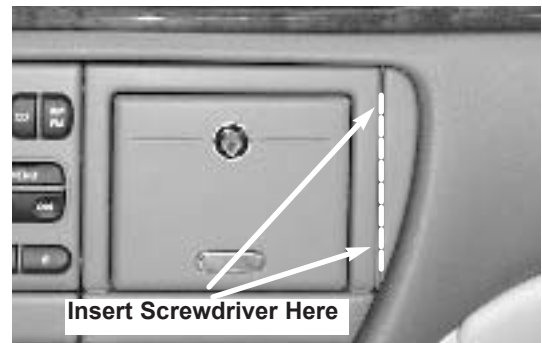

STEP 2.

Locate a 8mm hex head screw behind the trim piece. Remove the screw with a 8mm socket and driver. Install the phone holder onto the Pro.Fit VSM™. Align the hole in the Pro.Fit VSM™ with the screw hole. Insert the 8mm factory hex head screw and tighten.



STEP 3.

Carefully re-install the small trim piece.

This completes the installation of your Pro.Fit VSM™.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: www.pro-fit-intl.com

© Pro.Fit International, Eagan, MN 2003