



Toyota Avalon (2005-2008)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm nut driver, marking pen


PARTS INCLUDED: Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.

LOCATION: Right of climate control

STEP 1. Insert dash trim tool behind the round bezel around the ignition switch. Pry downward to remove. Insert trim tool behind lower-right corner of the steering column bezel. **Photo 1.** Pry downward to release a retainer clip. Work the tool up and then left until the right side of the bezel is loose and can be pulled out several inches. Do not remove this bezel.



STEP 2. Insert dash tool behind lower-left corner of radio / climate control bezel. **Photo 1.** Pry downward to release a clip. Work the tool clockwise around bezel until it is completely loose. Pull bezel out and disconnect the wiring harness on the left side. Do not disconnect right side. Wrap bezel in protective cloth and let rest on passenger seat.

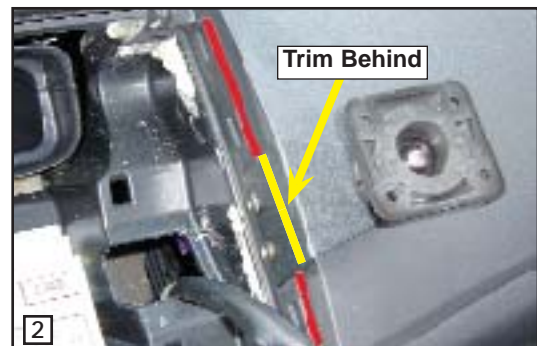

STEP 3. Place the Legend VSM against the dash, right of climate control. **Photo 2.** There is a small ridge (Orange line) on the side. Mark the ridge that is covered (Yellow line) with the Legend. Using a utility knife, carefully trim the ridge flush with the dash pad.

STEP 4. Place the Legend against the dash, centered over the area that was trimmed. Using the holes in the Legend as a guide, mark pilot holes with marking pen. Set the mount aside. Carefully drill pilot holes with 5/64" drill bit and drill. Place the Legend over pilot holes and align holes. Insert provided screws and tighten with # 2 Phillips screwdriver. This step is easier if you use a right angle tool like the SkewDriver, part number DM-60-22.



STEP 5. Assemble dash in reverse order securing all clips and wiring. This completes the installation of your Pro.Fit

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

