



## INSTALLATION INSTRUCTIONS

MAZDA MILLENIA (1995-2001)

PART NUMBER: MZ-53-95

VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
[WWW.PRO-FIT-INTL.COM](http://WWW.PRO-FIT-INTL.COM)

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.** All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** Small flat screw driver, #2 Phillips screwdriver, hook tool, 5/64" drill bit, and drill, marking pen.

**PARTS INCLUDED:** Pro.Fit VSM™, instructions, two (2) 8x3/8" screws.

**LOCATION:** To the right of the radio.

### STEP 1.

Begin by opening center console storage compartment door. Remove inner storage compartment box by releasing clips located on each side. To do this, insert small flat screw driver in between box and padded molding on center console unit. Release one side at a time. Lift unit out and set aside.

### STEP 2.

Locate and remove two (2) Phillips screws in the trim bezel surrounding emergency brake handle. Set screws aside. Release fabric cover for emergency brake. Pull trim panel out of way. Remove two (2) Phillips screws at the bottom of trim panel surrounding entire radio and shifter area. Set screws aside. Insert the hook tool behind the upper right corner of the bezel that surrounds the radio. Pull toward you to release top right clip. Perform this same action in the upper left corner of the bezel. Let the bezel hang to the left side of the center console. **Do not remove any wiring to the bezel.**


### STEP 3.

Install the phone holder onto the Pro.Fit VSM™. Place Pro.Fit VSM™ to right of radio. With marking pen, mark two spots for pilot holes using the holes in the Pro.Fit VSM™ as a guide. Drill two (2) pilot holes using the 5/64" drill bit and drill. Insert and tighten the two (2) 8x3/8" screws provided.

### STEP 4.

Re-install the dash in reverse order securing all screws and clips.

This completes the installation of your Pro.Fit VSM™.

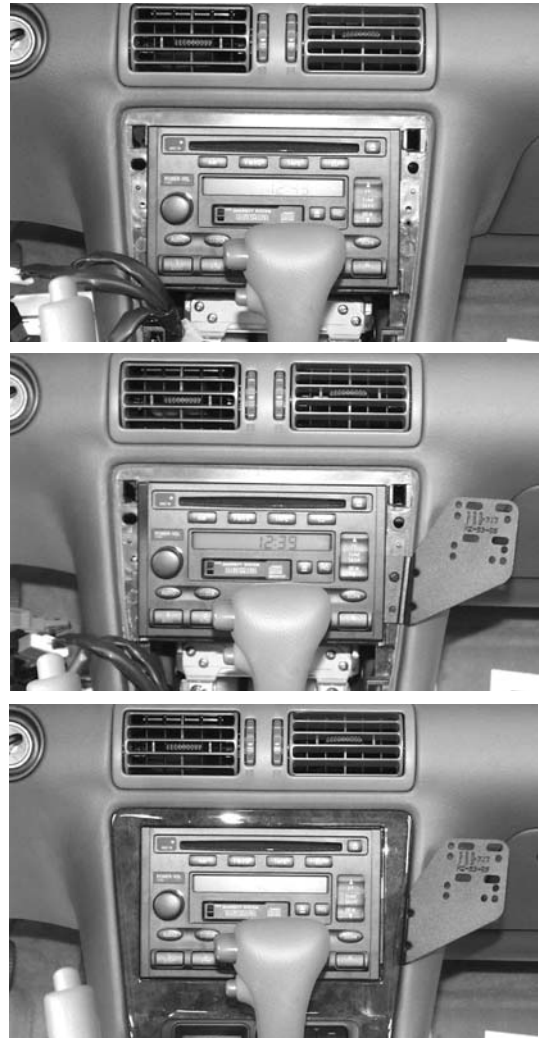

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: [www.pro-fit-intl.com](http://www.pro-fit-intl.com)

© Pro.Fit International, Eagan, MN 2003