



PONTIAC BONNEVILLE (2000-2005)

PART NUMBER: **PT-50-00**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


PRO-FIT logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, 5/64" drill bit and drill, hook tool, utility knife.


PARTS INCLUDED: Pro.Fit VSM®, instructions, two (2) #10x 5/8" screws.

LOCATION: To the right of the radio

STEP 1. Begin by locating two (2) push clips at the top of the dash bezel, directly above the speedometer and tach. Push the center pin in with your hook tool until you hear a click. To loosen the dash panel around the radio, insert your hook tool into the lower right corner of the dash bezel. Gently pull towards you until the retainer clip releases. Work your way around the bezel until the trim bezel is loose. The trim bezel around the ignition switch will automatically release as you continue to loosen the dash panel. It is not necessary to completely remove the bezel. Locate the switch above the upper right corner of the radio. Disconnect the wiring to the switch in order to pull the bezel out a bit further.

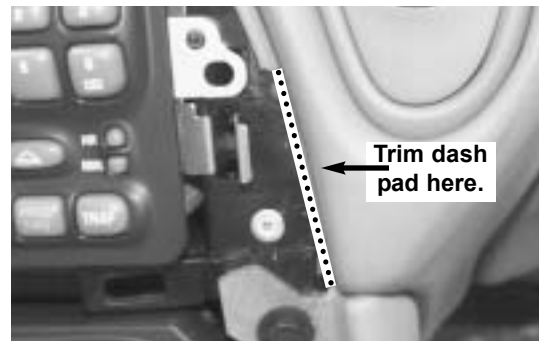

STEP 2. Carefully trim back the dash pad just enough that the mount will sit flush with the dash pad. Place the **Pro.Fit VSM®** to the right of the radio, 1/4" up from the bottom of the line. (See middle photo.) Mark the location of the two (2) screw holes. Set the mount aside. Drill two (2) pilot holes with a 5/64" drill bit and drill. Align the mount over the two (2) pilot holes, insert the #10x1/2" screws and tighten.

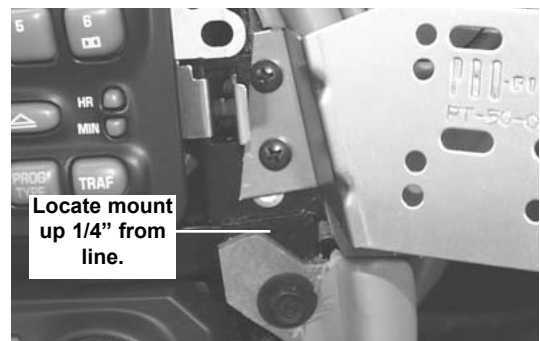

STEP 3. Reattach the switch wiring above the radio and reassemble the dash in reverse order.

This completes the installation of your **Pro.Fit VSM®**



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

