



## PONTIAC GRAND AM (1999-2000) (See reverse side for 2001-2004 instructions)

PART NUMBER: **PT-53-99**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**  
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**


**TOOLS REQUIRED:** Hook tool, 9/32" socket and driver, sharp utility knife.

**PARTS INCLUDED:** Pro.Fit VSM®, instructions.

**LOCATION:** To the right of the radio.

### STEP 1.

Begin by removing the bezel that surrounds the radio and climate control. Insert the hook tool behind the bezel in the upper right corner of the radio and pull toward you to release top right clip. Just above the ignition switch insert the hook tool behind the bezel and pull toward you releasing the far left clip. **NOTE: The black ring that surrounds the ignition switch will pop loose when clip is released.** Grab the ring and set it aside. Perform this same hook tool action in the upper left corner of the radio and the lower left and right corners of the climate control, releasing the remaining clips that hold the bezel in place. **Apply the emergency brake.** Insert the ignition key into the ignition switch and turn the switch to the "on" position. Shift the transmission into neutral. This will allow room to remove the bezel. Disconnect all wiring to the bezel. Set the bezel aside.

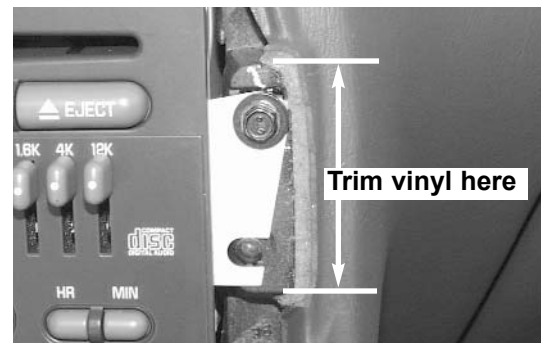

### STEP 2.

Locate the 9/32" hex head screw to the right of the radio. Remove the screw with the 9/32" socket and driver. Place the Pro.Fit VSM® over the screw hole and centering pin. Mark the top and bottom of the bracket with the marking pen. Remove the Pro.Fit VSM® and set it aside. **NOTE: Locate a small strip of vinyl dash pad to the right of the factory screw. Using extreme caution, remove this strip of vinyl with the sharp utility knife. Remove only enough vinyl so that it is flush with the mounting surface.** Place the Pro.Fit VSM® over the screw hole and centering pin. Insert the factory screw and tighten.




### STEP 3.

Re-assemble the dash in reverse order securing all wiring and clips. Install the phone holder onto the Pro.Fit VSM®.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

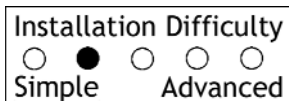



## PONTIAC GRAND AM (2001-2005)

(See reverse side for 1999-2000 instructions)

PART NUMBER: PT-53-99

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**  
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**


**TOOLS REQUIRED:** Hook tool, 9/32" socket and driver, sharp utility knife, marking pen, 5/64" drill bit and drill.

**PARTS INCLUDED:** Pro.Fit VSM®, one (1) #8 x 1/2", instructions.

**LOCATION:** To the right of the radio.

### STEP 1.

Begin by removing the bezel that surrounds the radio and climate control. Insert the hook tool behind the bezel in the upper right corner of the radio and pull toward you to release top right clip. Just above the ignition switch, insert the hook tool behind the bezel and pull toward you releasing the far left clip. **NOTE: The black ring that surrounds the ignition switch will pop loose when clip is released.** Grab the ring and set it aside. Perform this same hook tool action in the upper left corner of the radio and the lower left and right corners of the climate control, releasing the remaining clips that hold the bezel in place. **Apply the emergency brake.** Insert the ignition key into the ignition switch and turn the switch to the "on" position. Shift the transmission into neutral. This will allow room to remove the bezel. Disconnect all wiring to the bezel. Set the bezel aside.

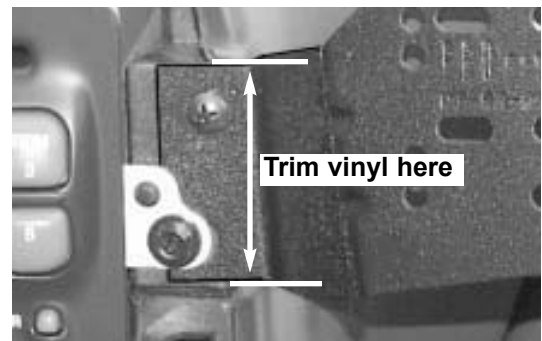

### STEP 2.

Locate the 9/32" hex head screw to the right of the radio. Loosen the screw enough to slide the Pro.Fit VSM® behind it. Mark the top and bottom of the bracket and the screw hole with the marking pen. Remove the Pro.Fit VSM® and set it aside. **NOTE: Locate a small strip of vinyl dash pad to the right of this screw. Using extreme caution, remove this strip of vinyl with the sharp utility knife. Remove only enough vinyl so that it is flush with the mounting surface.** Drill a pilot hole, using a 3/16" drill bit and drill, where you have marked the screw hole. Slide the Pro.Fit VSM® behind the factory screw. Insert an #8 x 1/2" screw in the pilot hole and tighten. Tighten the factory screw.




### STEP 3.

Re-assemble the dash in reverse order securing all wiring and clips. Install the phone holder onto the Pro.Fit VSM®.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

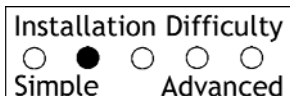

© Pro.Fit International, Eagan, MN 2005

