



PONTIAC AZTEC (2001-2005)

PART NUMBER: **PT-70-00**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: Hook tools, #2 Phillips screwdriver, T-15 Torx driver, 7mm socket and driver, masking tape

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: Right of radio


STEP 1.

Begin by removing the cup holder insert from the shift lever console. Using your hands, grasp the cup holder and gently pull out. Set the cup holder aside. Remove the #2 Phillips screw located in the cup holder cavity. Set the parking brake and put the shift lever into neutral. Next, remove the trim bezel around the shift lever. Using a hook tool, gently pull up on each corner of the bezel to release all four (4) clips. (See photo #1). Lift the bezel off and set aside

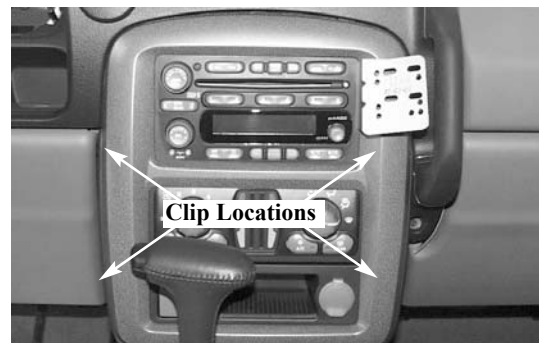

STEP 2.

Next, loosen the trim bezel around the radio and climate control module. Locate and remove two (2) T-15 Torx screws from the bottom of the radio trim bezel; one (1) screw each, lower left and lower right. Then, work a hook tool around the radio bezel to release the three (3) clips at the top. (See photo #2). Once the trim is loose, pull the bezel outward approximately three (3) inches. It is not necessary to remove the bezel completely.

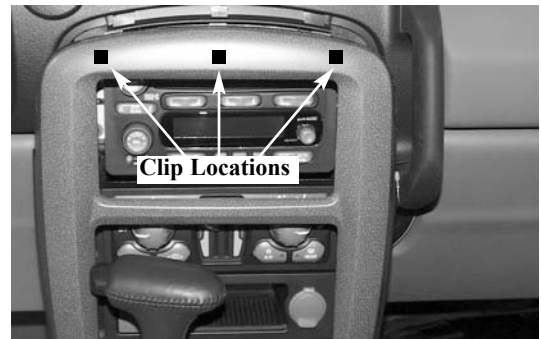


STEP 3.

Please Note! Protect the right and top sides of the bezel by covering them with masking tape before proceeding. Using a 7mm socket and driver, remove the bolt to the right of the radio. Place the Pro.Fit VSM® in front of the radio mounting bracket. Position the bottom hole of the VSM® over the 7mm bolt hole and the top hole of the VSM® over the alignment pin. Reinsert the 7mm bolt and tighten. Reassemble the dash in reverse order, remembering to remove the masking tape.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

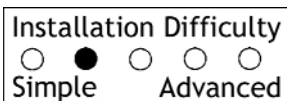

© Pro.Fit International, Eagan, MN 2005

