



INSTALLATION INSTRUCTIONS

SATURN SL, SL1, SL2, SW2 (2000-2001)

PART NUMBER: **ST-51-00**

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tool, 7mm socket and driver.

PARTS INCLUDED: **Pro.Fit VSM™**, instructions.


LOCATION: Right of radio.

STEP 1. Begin by partially removing the trim bezel from around the radio and climate control cluster. Insert a hook tool in the lower right corner of the bezel and gently pull towards you, releasing five (5) retainer clips. Working your way up the right side, pull back the bezel enough to expose the 7mm bolt located to the right of the radio. (See photo # 2). It is not necessary to completely remove the bezel. Remove the 7mm bolt.

STEP 2. After removing the factory 7mm bolt, pull the radio mounting bracket forward enough to allow you to slide the **Pro.Fit VSM™** between the radio bracket and the dash. Place the top hole of the **VSM™** over the radio alignment pin and the bottom hole over the radio bolt hole. Insert the 7mm factory bolt and tighten.

STEP 3. Reassemble the trim bezel in reverse order.

This completes the installation of your **Pro.Fit VSM™**.

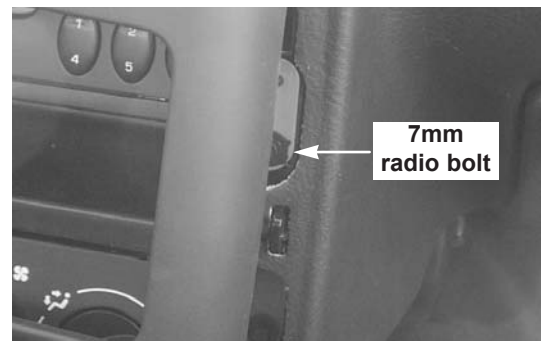

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.
Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fax: 651-688-9876
Web Address: www.pro-fit-intl.com