



# Saturn VUE (2002-2006)

PART NUMBER: ST-71-02-L



**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**TOOLS REQUIRED:** 7mm nut driver


**PARTS INCLUDED:** Pro.Fit Legend, instructions

**LOCATION:** Right of radio


## STEP 1.

Open the glove box and remove two (2) 7mm bolts from the upper-left corner of the compartment. Align the Legend over the bolt holes, reinsert the bolts and tighten.

This completes the installation of your Legend.

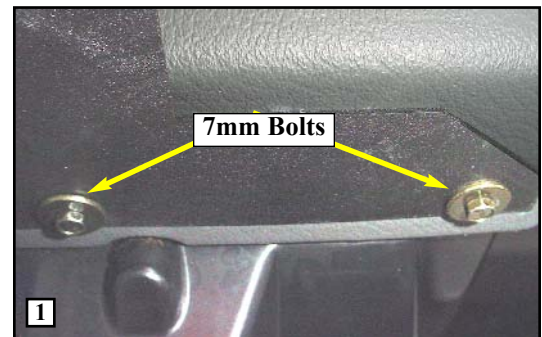

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2006

**VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
WWW.PRO-FIT-INTL.COM**