



SUBARU LEGACY "L" SERIES & LEGACY WAGON LEGACY OUTBACK (2000-2004)

(All w/o factory CD player)

PART NUMBER: SU-52-00

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook Tool, #2 Phillips screwdriver, marking pen, flat file.

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: Right of radio.

STEP 1. Begin by setting the parking brake and putting the gear shift in neutral. Next, remove the gear shift trim bezel by carefully sliding a hook tool under the right corner of the bezel and lifting up slightly. Do the same on the left side, releasing four (4) clips. Lift off the trim bezel and set aside.


STEP 2. There is a small pocket in front of the shifter. Locate and remove two (2) Phillips screws. (See photo # 1 inset). Lift up on the pocket and remove. Next, remove the trim bezel that surrounds the radio. Gently pull the lower right of the bezel with your hand and then the lower left side. Work your way up both sides of the bezel, pulling outward as you go. After the bezel is released, lift the bezel off and set aside.

STEP 3. The following is for the 2002 models only. Remove the ashtray from the dash. Next, take out the three (3) Phillips screws that hold the ashtray assembly in place. There are two (2) in the upper plate and one (1) on the back of the assembly.



STEP 4. There are two (2) existing Phillips screws to the right of the radio. (See photo # 2). After removing them, place the Pro.Fit VSM® over the screw holes, insert the screws and tighten slightly. Mark a line where the top and bottom of the Pro.Fit VSM® makes contact with the inner dash pad. Remove the two (2) Phillips screws and the VSM® and set aside. Carefully file away the area between the lines that were just marked. (See photo # 1.) Be careful to file only the area that is covered by the trim bezel. Do not file any area that will be exposed after the trim bezel is replaced. After the filing is completed, the VSM® should fit snugly against the dash pad. Make adjustments if necessary. Place the Pro.Fit VSM® over the screw holes, insert the screws and tighten. Reassemble the dash in reverse order.

This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2004

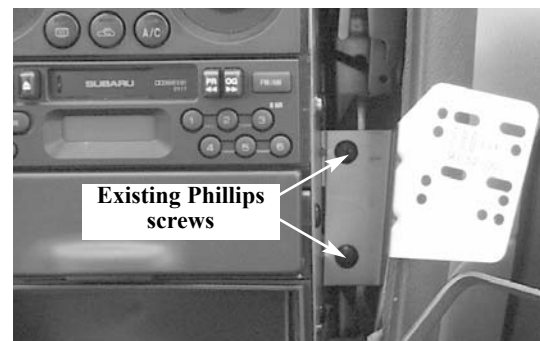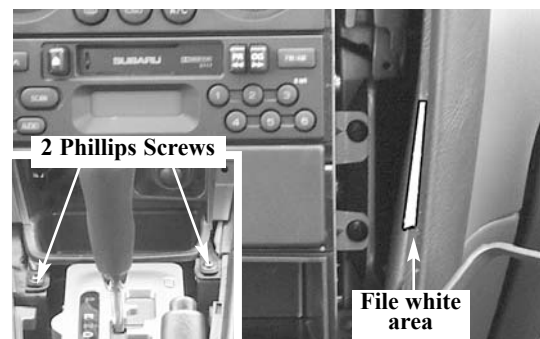

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM