



Toyota Avalon (2000-2004)
(With center console only. See other side for models w/o center console)

PART NUMBER: TY-51-00

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: #2 Phillips screwdriver, hook tool, 5/64" drill bit and drill, 10mm nut driver.

PARTS INCLUDED: Pro.Fit VSM®, instructions, two (2) #8 x 1/2" screws.

LOCATION: To the right side of radio.

STEP 1.

Begin by opening the arm rest cover. Insert your hook tool under the left side of the small trim piece next to the cup holder. Pull gently to release the left retainer clip. Repeat on the right side to remove the trim piece. Remove the two (2) Phillips screws that are behind the small trim piece. Next, set the emergency brake and put the gear shift lever into gear. Remove the trim bezel around the gear shift by inserting your hook tool under its edge and gently pulling upwards. Work your hook tool around the bezel to release all six (6) clips. Lift the panel up and set aside. **Do not disconnect the wiring.**

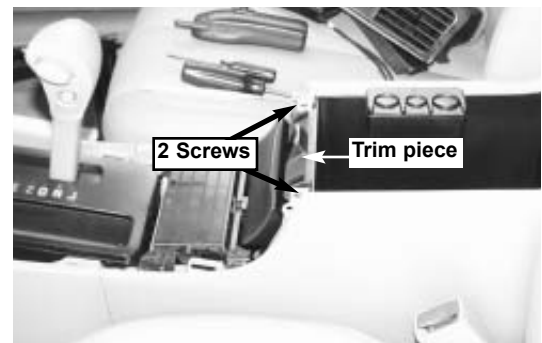

STEP 2.

Under the temperature control module is a small black panel that is held in place with two (2) clips. Remove the panel with your hook tool. Remove the two (2) 10mm bolts that are at the bottom of the temperature control module. **Note: Use extra care when completing the next step. The louvers in the air vent fall out of the vent very easily.** Insert your hook tool in the air vent above the radio to release three (3) retainer clips. (See 2nd photo). Slide the vent out of its cavity and disconnect the emergency flasher wiring. Set the vent aside. Remove the two (2) 10mm bolts above the radio. Slide the radio-temperature control module out of its cavity and set to the side. **Do not disconnect the wiring.**




STEP 3.

Place the Pro.Fit VSM® mount to the right of the radio, against the dash pad. Align the top of the custom mount to just below the radio centering hole. (See 3rd photo). Using the custom mount as a guide, mark two (2) pilot holes. Using a 5/64" drill bit and drill carefully drill two (2) pilot holes. Place the custom mount back into place, insert the two provided screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876





Toyota Avalon (2000-2004)
(Without center console only. See other side for model with center console)

PART NUMBER: TY-51-00

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver.

PARTS INCLUDED: **Pro.Fit VSM®**, instructions.

LOCATION: To the right side of radio.

STEP 1.

Begin by removing the trim bezel below the climate control module. (See photo #1). Insert your hook tool in the upper left corner of the bezel and gently work it to the right side, releasing two (2) retainer clips. Set the trim bezel aside. Remove the two (2) 10mm bolts that are under the temperature control module.



STEP 2.

Note : Use extra care when completing the next step. The louvers in the air vent fall out of the vent very easily. Insert your hook tool into the air vent above the radio and release three (3) retainer clips. (See photo #2). Slide the vent out of its cavity and disconnect the emergency flasher wiring. Set the vent aside. Remove the two (2) 10mm bolts above the radio. Slide the radio-temperature control module out of its cavity and set aside. **Do not disconnect the wiring.**




STEP 3.

Place the **Pro.Fit VSM®** to the right of the radio, against the dash pad. Align the top of the custom mount to just below the radio centering hole. (See 3rd photo). Using the custom mount as a guide, mark two (2) pilot holes. Using a 5/64" drill bit and drill carefully drill two (2) pilot holes. Place the **VSM®** back into place, insert the two provided screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© **Pro.Fit International**, Eagan, MN 2004

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM