



Hyundai Sonata 2011

TY-52-09-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM-G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), 5/64" bit and drill, Phillips screwdriver, marking pen, cloth


PARTS INCLUDED: VSM-G3 bracket, Lock Plate, J Stem, two (2) #8 x 1/2" screws

LOCATION: Right of Radio Air Vents

STEP 1. Insert the Dash Trim Removal Tool (DTRT) between the trim and the dash molding at the very top of the trim piece to the right of the air vent as identified in photo 1. Use a gentle twisting motion to release a series of retainer clips surrounding the trim piece that secure it to the dash molding. Place this trim piece carefully off to the side.



STEP 2. Remove the screws/bolts securing in the radio/GPS display and set them carefully off to the side. Gently remove the radio screen from its position and wrap a soft towel or cloth around it. Simply allow it to "hang" out of the way, do not disconnect the wiring. Place the VSM-G3 in place with the sides of the mount flush to the dash molding as indicated in photo 2. With the VSM-G3 flush and in place, use the VSM-G3 as a guide and mark the locations of the pilot holes with a marking pen. With a 5/64" bit and drill, drill out the marked locations. Be sure not to drill more than 1/4" deep. Place the VSM-G3 over the pilot holes and tighten it to the dash with the two supplied #8X1/2" screws and a Phillips screw driver.

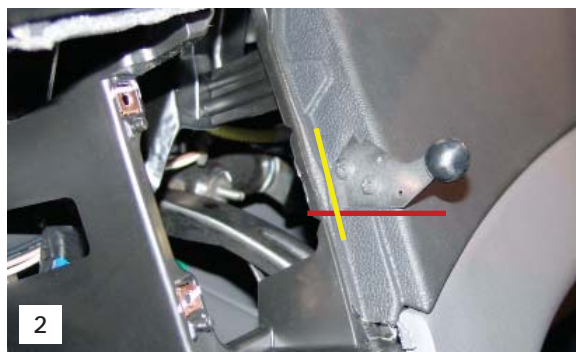

STEP 3. Once the VSM G3 is flush and secure, place the dash back together in the reverse manner in which it was dismantled. You have successfully installed your VSM-G3!



NOTE: See the Assembly Instructions for the G3 Components for additional information.
All of our Holders work with all of our Mounts!

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ○ ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2010

View Instruction & Updates
Online at
www.pro-fit-intl.com