



## INSTALLATION INSTRUCTIONS

### TOYOTA T-100 PICKUP (1994-98)

PART NUMBER: **TY-71-94**

VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
[WWW.PRO-FIT-INTL.COM](http://WWW.PRO-FIT-INTL.COM)

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.**  
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

*TOOLS REQUIRED:* 8mm socket, ratchet.

*PARTS INCLUDED:* **Pro.Fit VSM™**, instructions.

*LOCATION:* To the right of the radio.


#### STEP 1.

Begin by removing the trim bezel that surrounds the radio, climate control, and cup holder. To do this, pull the cup holder out slightly and work your fingers under bezel. Bezel is held in by four (4) clips [two (2) on each side] that will be released by pulling bezel. Set bezel aside.



#### STEP 2.

Using the 8mm socket, remove upper right hand bolt that holds radio in place. Install hang-up cup onto **Pro.Fit VSM™**. Insert factory screw through **Pro.Fit VSM™** and back into original hole while aligning centering pin with lower hole in **Pro.Fit VSM™**. Tighten screw.

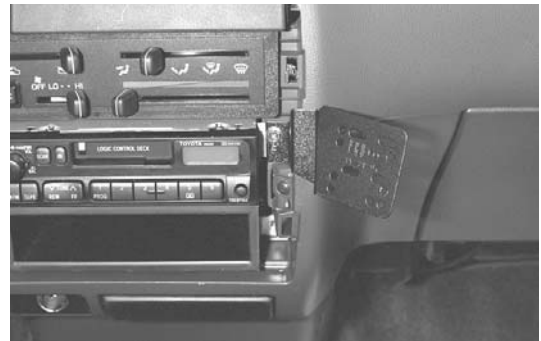

#### STEP 3.

Reinstall trim. Install hang-up cup onto **Pro.Fit VSM™**.

This completes the installation of your **Pro.Fit VSM™**.



**Pro.Fit International, Inc.®** may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.

**Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: [www.pro-fit-intl.com](http://www.pro-fit-intl.com)

© **Pro.Fit International**, Eagan, MN 2003