



TOYOTA TACOMA (1998-2003)

PART NUMBER: **TY-72-98**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tool , 8mm socket & driver , # 2 Phillips screwdriver.

PARTS INCLUDED: **Pro.Fit VSM®**, instructions.

LOCATION: To the right of the radio.

STEP 1. Begin by grasping the control knobs on the climate control and pulling them off toward you. There are two (2) on the slider controls and two (2) for the fan and temperature controls. Set them aside. Slide your hook tool in between the slots on the face plate of the climate control and pull toward you to release two (2) clips. Once those clips are loose, grasp the face plate with your fingers and **carefully** work loose the remaining clips. Set face plate aside.

STEP 2. Locate a Phillips screw that's securing the trim bezel to the right of the climate control. Remove that screw with your # 2 Phillips screwdriver. Set screw aside. Locate and remove a Phillips screw to the left of the climate control , this screw is at a forty five degree angle. Set screw aside. Remove ash tray, pressing down on silver tab and sliding out. Set ash tray aside. Locate and remove a Phillips screw in the back of the ash tray cavity. Set screw aside. Grasp the top section of the trim bezel and pull towards you to release the two (2) top clips. Do the same in the middle of the bezel releasing two (2) more clips. Grasp the bottom section of the bezel and pull towards you to release three (3) more clips.

STEP 3.

The following instructions are for model year 1998-1999 only. See STEP 4 for model year 2000. Locate small panel with cigarette lighter and power plug integrated in it. With your hands, grasp the outside edges of the trim piece and pull towards you to release three (3) clips. Proceed to STEP 5.

STEP 4.

Instructions for model year 2000. Locate small panel with cigarette lighter and power plug integrated in it. The release clips are located on either side of the panel. Insert a hook tool and push the center of the pin in, release the clips and pull towards you.


STEP 5. **Do not remove this trim piece.** You now can work the rest of the trim bezel off. Let Trim bezel hang to the left. **Do not disconnect wiring.** Locate upper right top 8mm hex head screw holding radio in place. Remove that screw with your 8mm socket and driver. Align **Pro.Fit VSM®** with that hole and centering pin then reinsert the factory screw and tighten with socket and driver. Reassemble dash in reverse order and install hang up cup onto **Pro.Fit VSM®**.

This completes the installation of your **Pro.Fit VSM®**.



Pictures of a 1998 Toyota Tacoma

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

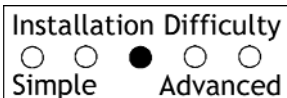

© **Pro.Fit International**, Eagan, MN 2003

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**