



## TOYOTA RAV4 (2001-2003)

(see reverse side for 2004-2005)

PART NUMBER:TY-73-01

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** 5mm Allen wrench, 10mm nut driver, # 2 Phillips screwdriver, hook tool, 5/64" drill bit and drill, marking pen.


**PARTS INCLUDED:** Pro.Fit VSM®, two (2) # 8-1/2" screws, instructions.

**LOCATION:** Right of Climate Control

**STEP 1.** Begin by removing the radio trim bezel. Using a 5mm Allen wrench, remove the four (4) 5mm, Allen-head bolts located in the radio trim bezel. (See photo # 3). Next, insert a hook tool behind the lower right side of the bezel and pull out to release one (1) retainer clip. (See photo # 1). Release the clip on the left side in the same manner. Set the bezel aside.



**STEP 2.** Using a 10mm nut driver, remove the four (4) hex-head bolts from around the radio. (See photo # 1). Pull the radio out slightly. Next, use a # 2 Phillips screwdriver to remove the two (2) Phillips screws from the top of the climate control panel. (See photo # 1). Pull out the upper right corner of the climate control and move to the side. (See photo # 2).

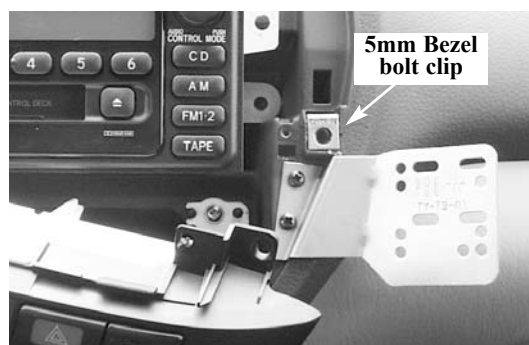


**STEP 3.** Align the top of the Pro.Fit VSM® against the bottom of the 5mm bezel bolt clip. (See photo # 2). Using the VSM® as a guide, mark the location of the two (2) mounting holes. Set the VSM® aside. Using a 5/64" drill bit and drill, drill two (2) pilot holes at the marked locations. Position the VSM® over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

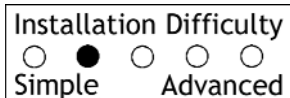

© Pro.Fit International, Eagan, MN 2005





## TOYOTA RAV4 (2004-2005)

(see reverse side for 2001-2003)

PART NUMBER:TY-73-01

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** 10mm nut driver, # 2 Phillips screwdriver, dash trim removal tool, 5/64" drill bit and drill, marking pen.

**PARTS INCLUDED:** Pro.Fit VSM, two (2) # 8-1/2" screws, instructions.

**LOCATION:** Right of Climate Control

### STEP 1.

Insert the dash trim tool behind the lower-left corner of trim bezel, left of radio. Pry outward to release retainer clip. Work the tool upwards to release a total of three (3) clips. Set bezel aside and perform same procedure on the bezel right of radio. Remove two (2) Phillips screws located on upper sides of the air vent. Pull air vent out and set aside. **Photo 1.**



### STEP 2.

Remove four (4) 10 mm bolts that secure radio. Remove two (2) Phillips screws from the upper corners on climate control. Slide radio out of its cavity approximately one (1) inch. Pull climate control out slightly, tilting front downward to clear bottom of radio. Slide climate control to the left until VSM mounting surface is accessible. **Photo 2.**



### STEP 3.

Align the VSM against the dash, just right of the climate control. **Photo 2.** Using the VSM as a guide, mark the location of the two (2) mounting holes. Set the VSM aside. Using a 5/64" drill bit and drill, drill two (2) pilot holes at the marked locations. Position the VSM over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.



This completes the installation of your **Pro.Fit VSM**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

