



ULTIMOUNT




PART NUMBER: **UL-747**

The **UltiMount** is designed to allow many placement options. Before installing this product, determine where it will work best for the primary user. Be sure to mount your preferred hand-held device on the **UltiMount** and then practice positioning the **UltiMount** on hard surfaces within the vehicle.

IMPORTANT NOTICE: The Surface Preparation Cleaning Kit and Alcohol Prep have been included to clean the mounting location prior to installing the UltiMount Flex Pad. To obtain maximum Flex Pad adhesion, you must clean the mounting location of silicone emulsions, i.e. Armor All, according to the following instructions. Failure to properly prepare the mounting location may result in the Flex Pad failing to adhere and may void your warranty. Do not apply adhesive to leather surfaces.


- Step 1.** Select a location that does not block your vision or controls. Clean the mounting location with the Surface Preparation Kit. Wipe in only one direction. **DO NOT USE A CIRCULAR MOTION!**
- Step 2.** Dry cleaned surface with a cloth, wiping in the same direction as above. Repeat steps 1 & 2.
- Step 3.** Clean the area with the Alcohol Prep, wiping in the same direction as above, and dry surface with a dry, clean towel.
- Step 4.** Remove the Flex Pad from the UltiMount. Peel the tape off the Flex Pad adhesive, press to the mounting location and apply firm pressure for a minimum of 30 seconds. Let the adhesive “cure” for 72 hours before using the UltiMount.

- * Recommended installation temperature for the Flex Pad is a minimum of 60° F.
- * The 3M adhesive applied to the back of the UltiMount is a “**one time only application**”.

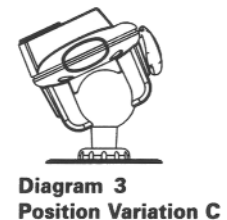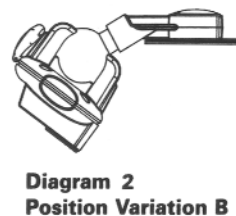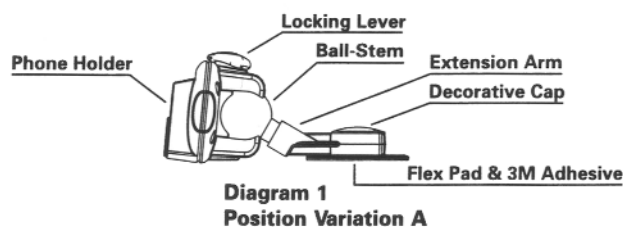

To achieve **Position ‘A’**, remove the decorative cap. Remove the screw that secures the Flex Pad. Take the Flex Pad off, place on the other side of the extension arm, reinsert screw and tighten. Replace decorative cap. The UltiMount is shipped in **Position ‘B’**. To achieve **Position ‘C’**, remove the screw in the end of the ball-stem. Next, remove decorative cap and remove the screw holding the extension arm. Attach the Ball-Stem to the Flex Pad. Reinsert screw and tighten.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

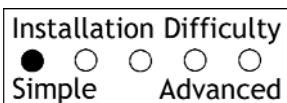

© Pro.Fit International, Eagan, MN 2003

