



INSTALLATION INSTRUCTIONS
VOLVO S40, V40 (2000-2002)
(Manual and Automatic Climate Control)

**VIEW INSTRUCTIONS & UPDATES
 ONLINE @
 WWW.PRO-FIT-INTL.COM**

PART NUMBER: **VO-55-00**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: Hook tool, #2 Phillips screwdriver, 5/64" drill bit and drill, marking pen.

PARTS INCLUDED: **Pro.Fit VSM™**, instructions, three (3) #6x3/8" bevel head screws.

LOCATION: Right of climate control.

STEP 1.

Begin by removing the trim bezel around the climate control knobs. The bezel is held in place by eight (8) clips, four (4) on top and four (4) on the bottom. (See photo # 1). Insert a hook tool in the lower right corner of the bezel and gently pull outward. Work the hook tool around the entire trim bezel until all clips are released. Set bezel aside.

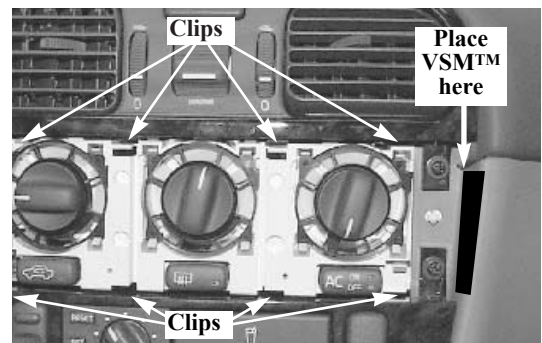


STEP 2.

Place the **Pro.Fit VSM™** against the dash pad location shown in photo # 1. Using the **VSM™** as a guide, mark the location of the three (3) screw holes. Using a 5/64" bit and drill, drill three (3) pilot holes approximately 1/2" deep. Align the **VSM™** over the pilot holes, insert three (3) #6 x 3/8" bevel head screws and tighten. Replace the trim bezel.



This completes the installation of your **Pro.Fit VSM™**.

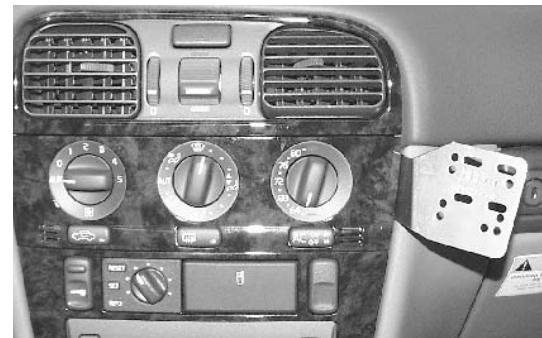

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.
Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fax: 651-688-9876
 Web Address: www.pro-fit-intl.com