



## XM Semi Truck Antenna Bracket

(for micro magnetic antenna)

PART NUMBER: XM-ANT



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THE XM Semi Truck Antenna Bracket.

**TOOLS REQUIRED:** 7/16" socket and driver, marker

**PARTS INCLUDED:** XM Antenna bracket assembly, spiral wrap, hardware



**LOCATION:** Top of mirror bracket on either door

**CAUTION:** Never kink, pinch, twist, overly stress or attempt to cut your XM antenna's cable. To do so may cause irreparable damage resulting in loss of signal or poor overall reception.

**STEP 1.** Hang the XM Antenna bracket on the top bar as in **Photo 1**. The tabs should extend toward the rear of the truck. **Photo 2**. Place the clamping plate over the four (4) bolts. Place the four (4) washers and nylok nuts on the four (4) studs and partially tighten. Align the bracket so that the antenna bracket is horizontal and pointing towards the back of the truck and finish tightening the nuts. **Photo 2**.

**STEP 2.** From the topside of the bracket, slide the antenna's cable through the front hole and set the body of the antenna in place between the three guide tabs. The antenna's magnet will hold it securely in place. **Photo 3**.

**STEP 3.** Route the antenna cable through the wing window or between the door and weather stripping. Note where the cable comes into contact with the window or door, and cover this with the included spiral wrap to guard against chaffing, kinking, pinching or being severed. The spiral wrap should extend at least six (6) inches to either side of the entry point. As a secondary precaution, excess exterior antenna cable should be either secured with zip ties or wrapped in a spiral fashion around the mirror bracket. Pull the remaining antenna cable into the cab and attach to the XM Satellite Radio receiver.

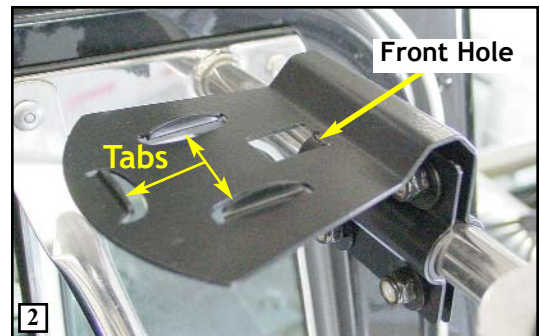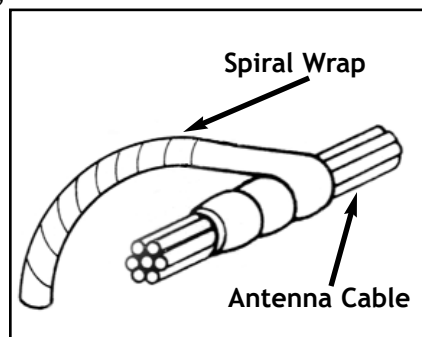

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Bracket. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Installation Difficulty



© Pro.Fit International, Eagan, MN 2004

VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
[WWW.PRO-FIT-INTL.COM](http://WWW.PRO-FIT-INTL.COM)