



**Chevrolet Suburban, Avalanche, Tahoe 2007-2010**  
**Chevrolet Silverado 1500, 2500, 3500 2007-2010**  
**GMC Yukon, Yukon Denali 2007-2010**  
**GMC Sierra 1500, 2500, 3500 2007-2010**

PART NUMBER: **CVANTPF**  
 (For NMO style antenna mount)

Please Read Complete Instructions Before Installing This Pro.Fit Antenna Mount

**TOOLS REQUIRED:** 13 mm socket and driver or 13 mm box end wrench  
**PARTS INCLUDED:** Pro.Fit Antenna Mount, 1/2" stainless steel star washer, instructions  
**LOCATION:** Left Front Fender

**Note:** The Sierra 2500, 3500 and the Silverado 2500, 3500 with diesel engines have a rubber seal underneath the hood and a small section of this seal must be removed with a utility knife in order to allow space for the NMO mount to correctly fit.

**Please read** Always check for good continuity between antenna mount and chassis ground. If there is a problem with grounding, place the provided star washer between the NMO antenna mount and vehicle's fender.

**STEP 1.**

Set parking brake. Open hood and locate 13 mm bolt near the back of the left front fender. Remove bolt.


**STEP 2.**

Align the antenna bracket with the bolt hole. Reinstall bolt and tighten.

**STEP 3.**

Install NMO antenna mount on bracket. (NMO not supplied).

This completes the installation of your **Pro.Fit** Antenna Mount for NMO style antenna.

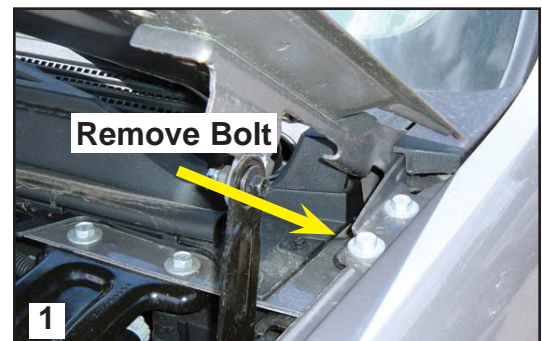

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

