



Ford F-150 (2009-2012)
Ford Expedition (2009-2012)
PART NUMBER: FO2ANTPF
(For NMO style antenna mount)

Please Read Complete Instructions Before Installing This Pro.Fit Antenna Mount

TOOLS REQUIRED: 10mm socket and driver, or 10mm box end wrench
PARTS INCLUDED: Pro.Fit Antenna Mount, 1/2" stainless steel star washer, instructions
LOCATION: Left Front Fender

Please read : Always check for good continuity between antenna mount and chassis ground. If there is a problem with grounding, place the provided star washer between the NMO antenna mount and vehicle's fender.

STEP 1.

Set parking brake. Open hood and locate 10 mm bolt near the middle of the left front fender. Remove bolt.

STEP 2.


Align the antenna bracket with the bolt hole. Reinstall bolt and tighten.

STEP 3.

Install NMO antenna mount on bracket. (NMO not supplied). This completes the installation of your **Pro.Fit** Antenna Mount for NMO style antenna.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this NMO mount.
Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.
Pro.Fit International, Inc.® 314 West 86th Street, Bloomington, MN 55420, Ph: 952.641.4700 or 800.388.0073 Fx: 952.641.4701

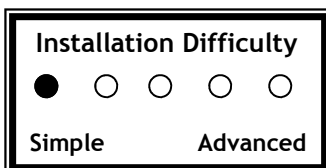

© Pro.Fit International, Bloomington, MN 2010

